

HEPA BACKPACK VACUUM CARE

① INTERCEPT MICRO FILTER (PAPER BAG)




INSPECT the Intercept Micro Filter **EVERY DAY** after use.

Replace the filter if 2/3 full or damaged.

A clogged and dirty filter restricts airflow and results in reduced suction and overheating of vacuum.

Always discard filter at the end of the work week.

② CLOTH FILTER

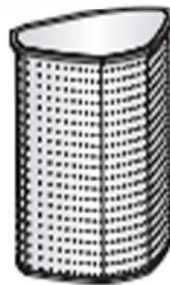

At End of the Work Week
rinse or machine wash the
cloth filter and let **AIR DRY**.
**DO NOT PUT CLOTH
FILTER IN DRYER.**

③ DOME FILTER



At End of the Work Week,
with the Intercept Micro Filter
and Cloth Filter removed, reach
into vacuum body and twist
Dome Filter from motor.




Pull the top piece of the
Dome Filter off and remove
the foam media. Shake it out,
rinse with cold water, and
let **AIR DRY**.

**DO NOT PUT DOME
FILTER IN DRYER.**

④

HEPA EXHAUST FILTERS

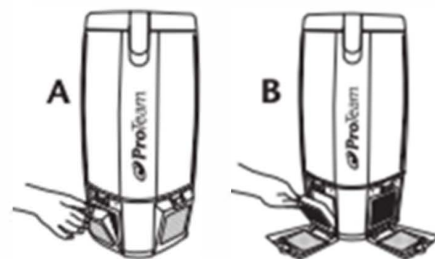

At End of the Work Week,
inspect the HEPA Filters.

If HEPA Filters need to be
replaced, inform the
Assistant Facility Manager,
Lead Custodian, or Senior Sweeper.

⑤ Wipe clean the extension cord and body of the vacuum, inside and out. Leave vacuum open to be reassembled on the first day of the work week.