HEPA BACKPACK VACUUM CARE

1

INTERCEPT MICRO FILTER (PAPER BAG)



EMPTY and INSPECT the Intercept Micro Filter
EVERY DAY after use. Replace the filter if necessary.
A clogged and dirty filter restricts airflow and
results in reduced suction and overheating of vacuum.

2 CLOTH FILTER

3 DOME FILTER



At End of the Work Week, with the Intercept Micro Filter and Cloth Filter removed, reach into vacuum body and twist Dome Filter from motor.



Pull the top piece of the Dome Filter off and remove the foam media. Shake it out, rinse with cold water, and let AIR DRY.


DO NOT PUT DOME FILTER IN DRYER.




At End of the Work Week rinse or machine wash the cloth filter and let AIR DRY.
DO NOT PUT CLOTH
FILTER IN DRYER.

4)

HEPA EXHAUST FILTERS

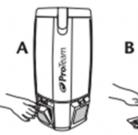



If HEPA Filters need to be replaced, inform the Assistant Facility Manager, Lead Custodian, or Senior Sweeper.

Wipe clean the extension cord and body of the vacuum, inside and out.

Leave vacuum open to be reassembled on the first day of the work week.